

# WIRELESS RGBW MULTI-ZONE LED WALL CONTROLLER

MODEL: AL-CTRL-RGBW-3ZRF-WMT



## Description

This permanently mounted in-wall controller allows you to control your RGBW LED fixtures, providing full color and brightness control. Simply connect this unit to its receiver (or control box), your RGBW LED fixtures and a power supply, mount your wall plate, and start controlling your fixture. Choose any color output using the touch wheel and easily turn your dedicated white chips on and off.

This RGBW LED controller is compatible with all of aspectLEDs RGBW LED fixtures. Please note, this remote controller requires a Wireless RGBW 4 Channel LED Controller (AL-CTRL-RGBW-4CP) base unit. This in-wall controller communicates with its receiver wirelessly, but must be hardwired with low voltage wire to your power supply. To pair this controller with its base unit, turn the in-wall unit on, then the desired zone number on the remote (1-3). Press the learning key on the base unit, then touch the color wheel. Your lights should blink, and your controller should be paired.



[Learn more](#)

	AL-CTLR-RGBW-3ZRF-WMT
<b>In-Wall Remote Dimensions</b>	4.73" (120.1mm) long 2.96" (75.2mm) wide 1.16" (29.5mm) thick
<b>RF Receiver/Control Box</b>	Wireless RGBW 4 Channel LED Controller with Channel Pairing
<b>Input Voltage</b>	12VDC or 24VDC
<b>Power Source</b>	12VDC or 24VDC power supply
<b>Output Signal</b>	Wireless (RF) Remote Control, DMX
<b>Compatible Power Supplies</b>	Non-dimmable power supplies
<b>Weight</b>	0.9 lbs
<b>Warranty</b>	1 Year

Dimensions

