


DMX Addressable Multi-Strip Continuous Data Wiring Diagram

This diagram shows you how to properly connect the data and power between multiple lengths of addressable strip lights so the program being run is cohesive and continuous.

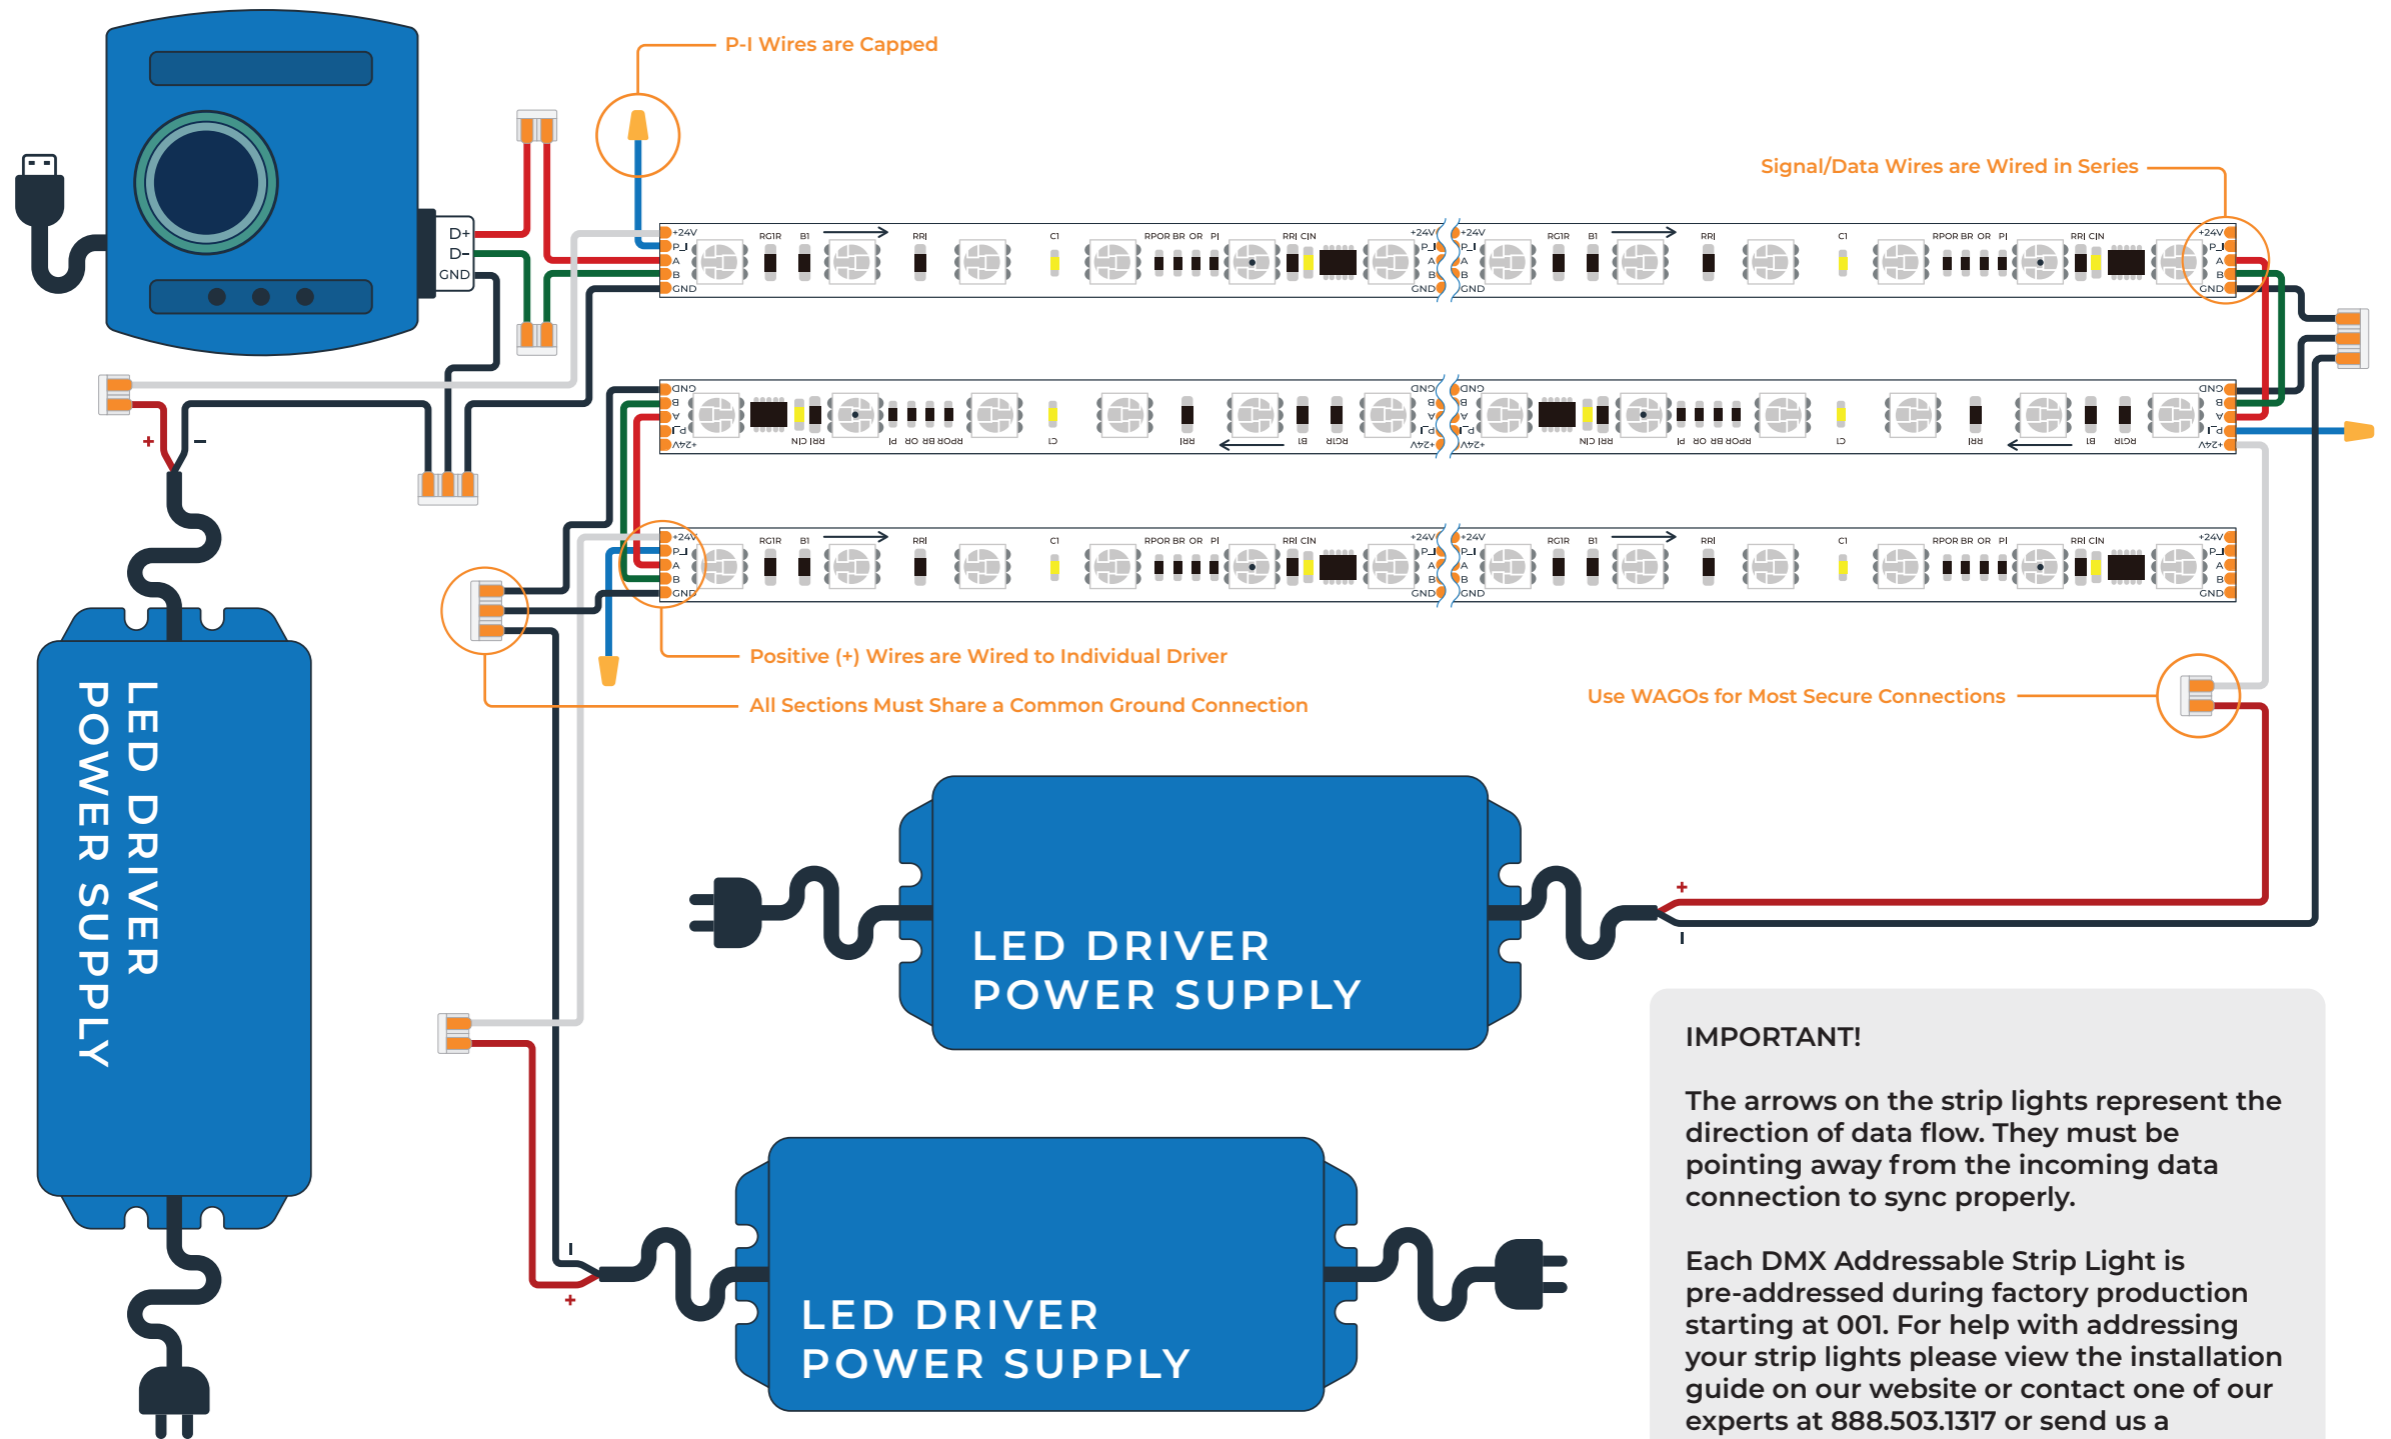

IMPORTANT!

The arrows on the strip lights represent the direction of data flow. They must be pointing away from the incoming data connection to sync properly.

Each DMX Addressable Strip Light is pre-addressed during factory production starting at 001. For help with addressing your strip lights please view the installation guide on our website or contact one of our experts at 888.503.1317 or send us a message at support@aspectLED.com.